


Fasten Stringer to Slab  
w/ 3x3x1/4x5"  
Steel Angle with (2)  
1/2 Diameter x 4" Bolts @ each Stringer

Bottom of Stair

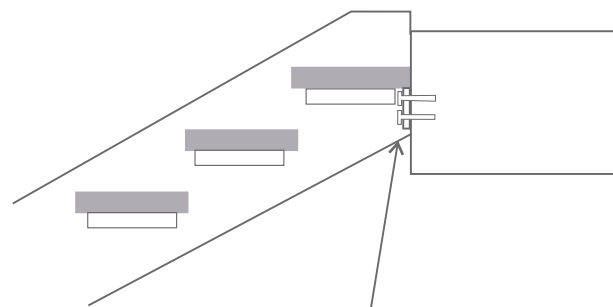

3x3x1/4x 5 Long Angle  
with full weld to stringer  
attach to beam with (2) 5/8"  
Lag Bolts w/washers

Top of Stair

Stairs 4

Drwg.#  
Date 02.04.01

**MEYER SMITH INC.**  
Drawn By: JRS 713.864.2929